









DSX Touch






DEX Next



DSX Touch; DEX Next

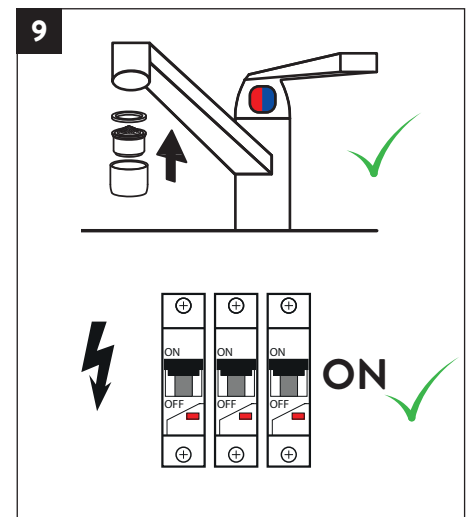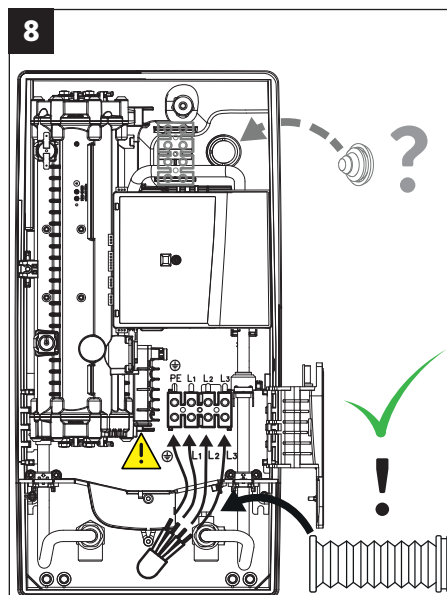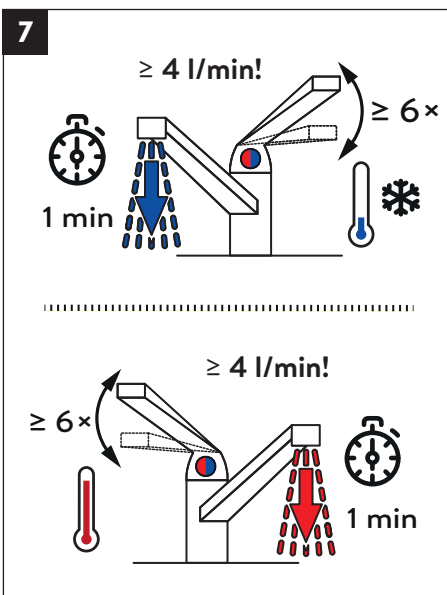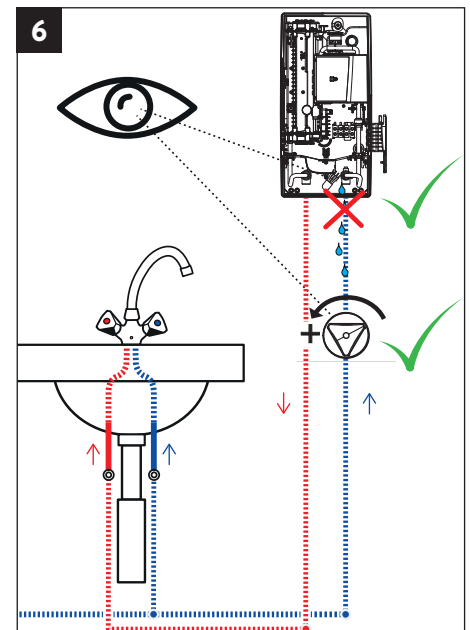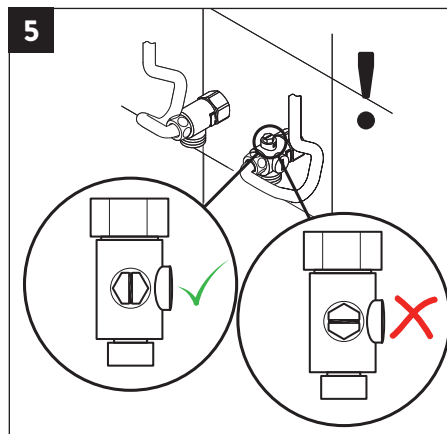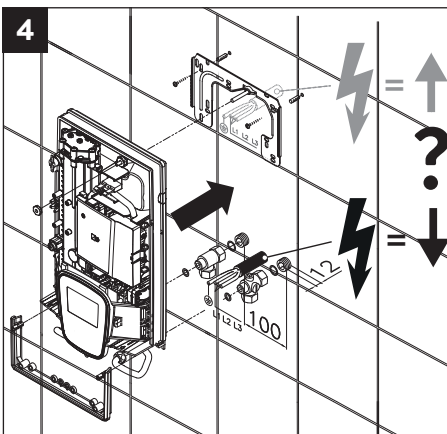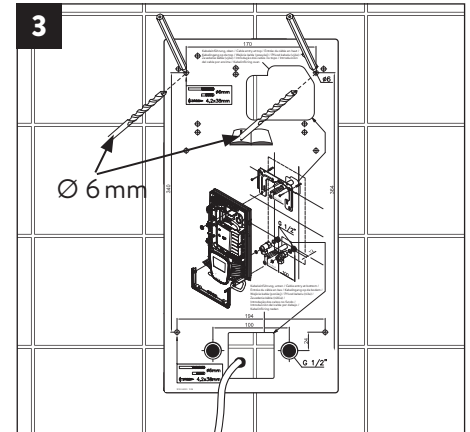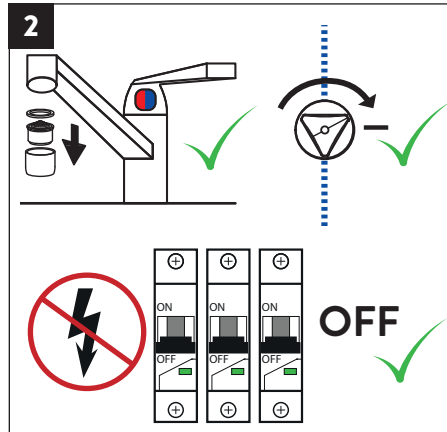

DSX Touch; DEX Next

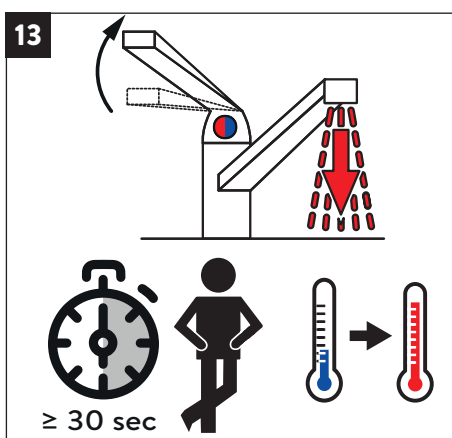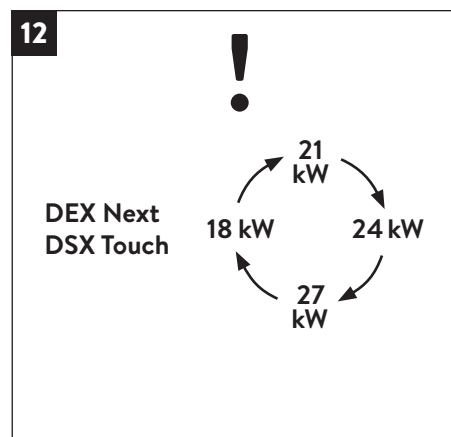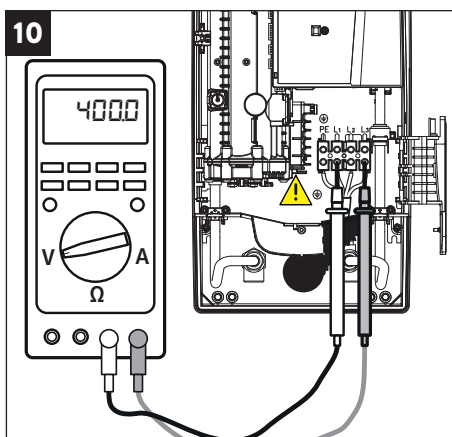

Fehler? / Error? / Erreurs?

